

Your DVD lens cleaner's six microfiber brushes provide the clearest possible image from your DVD player or your computer's DVD ROM drive. The cleaner checks color fade, contrast, and brightness, and analyzes speaker connections, Dolby Digital 5.1, ProLogic, and frequency responses.

## FOR A DVD ROM DRIVE

Insert the lens cleaner into the computer's DVD ROM drive then follow the on-screen instructions. Use the mouse to click **PLAY▶** to begin cleaning, or click **PREVIOUS◀◀** or **NEXT▶▶** to select the desired program from the lens cleaner's program menu.

To stop the lens cleaner, click **STOP■** and eject the lens cleaner.

## FOR A DVD PLAYER

Insert the lens cleaner into the DVD player then press **PLAY▶**.

To select one of the programs listed in the table, press **PREVIOUS◀◀** or **NEXT▶▶** to select the desired program in the program menu, then press **PLAY▶** to process the program.

### Notes:

- Controls vary from machine to machine. Your machine might use different controls ( arrow keys, SELECT, OK, or ENTER) to complete the necessary steps.
- From the Program Menu, you can choose to begin at any point in the Program Sequence. Use the controls listed above to move from one menu location to another and to select a program.
- The ProLogic function checks the output of Stereo (2 Channel) or ProLogic sound. The 5.1 Channel checks the output of Dolby Digital 5.1 sound. If your

audio system is Stereo (2 Channel) or ProLogic and you select 5.1 Channel Check of Audio Channels, your audio system might not match the on-screen 5-channel speaker outputs, but the audio frequency response check does work for your audio system.

Program Menu	Program Sequence	Function
DVD Laser Lens Cleaner	1	Cleans DVD laser lens
ProLogic, Check of Audio Channels	2-5	Checks stereo or ProLogic sound output
5.1 Channel, Check of Audio Channels	6-12	Checks digital 5.1 channel sound output
Audio Frequency Response Check	13-15	Checks speaker wire connection and frequency response
Video Color Fade Check	16-17	Checks video color fade, brightness, contrast
Video With 5.1 Channel Dolby digital Surround Sound	18-20	Provides 2 demo videos with 5.1 channel Dolby digital surround sound

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

## Chapter

	Logo
	Menu
1	Cleaning process
2	Introduction, ProLogic, audio channel check (Stereo/2 channels or ProLogic)
3	Left channel
4	Right channel
5	All channels
6	Introduction, 5.1 channel, audio channel check
7	Mono
8	Stereo
9	3 stereo
10	Discrete
11	Quad
12	5 channels
13	Introduction, audio frequency response check (digital output)
14	Left, center, right rear right/left 500Hz—20KHz
15	Subwoofer 20Hz—350Hz
16	Introduction, color fade
17	Grey level
18	Introduction of video program with 5.1 channel sound
19	Helicopter
20	Train
21	The end